



Loading Jobs To RDS Apollo For VRT Spreading

1. *Save RDS_DATA.xxx File to computer (make a copy)*
2. *Place SD card in controller*
3. *Select Menu (red button)*
4. *Select No.4 (General PF Setup)*
5. *Select No.6 (Ports Setup)*
6. *Select Bottom Port*
7. *Change Bottom port to RDS PF MODULE*
8. *Select MAIN (top left button)*
9. *Select LOG*
10. *Select START (this will show the job start up)*
11. *Select 1 (apply from plan)*
12. *Enter the Farm No. (use list if available)*
13. *Enter Paddock No. (" " " ")*
14. *Select Machine*
15. *Select No.1 (seed)*
16. *Select the specific plan*
17. *Select START again*
18. *Select SKIP FUNCTIONS*
19. *The work plan will then start loading*
20. *After the work plan is loaded a screen with:
running a planned job will appear*
21. *Select the Main screen again*
22. *A satellite should start flashing above you target
rate and you are ready to start spreading*